


NO.10 NTG5.5小屏連線示意圖 / Schematic diagram of connection

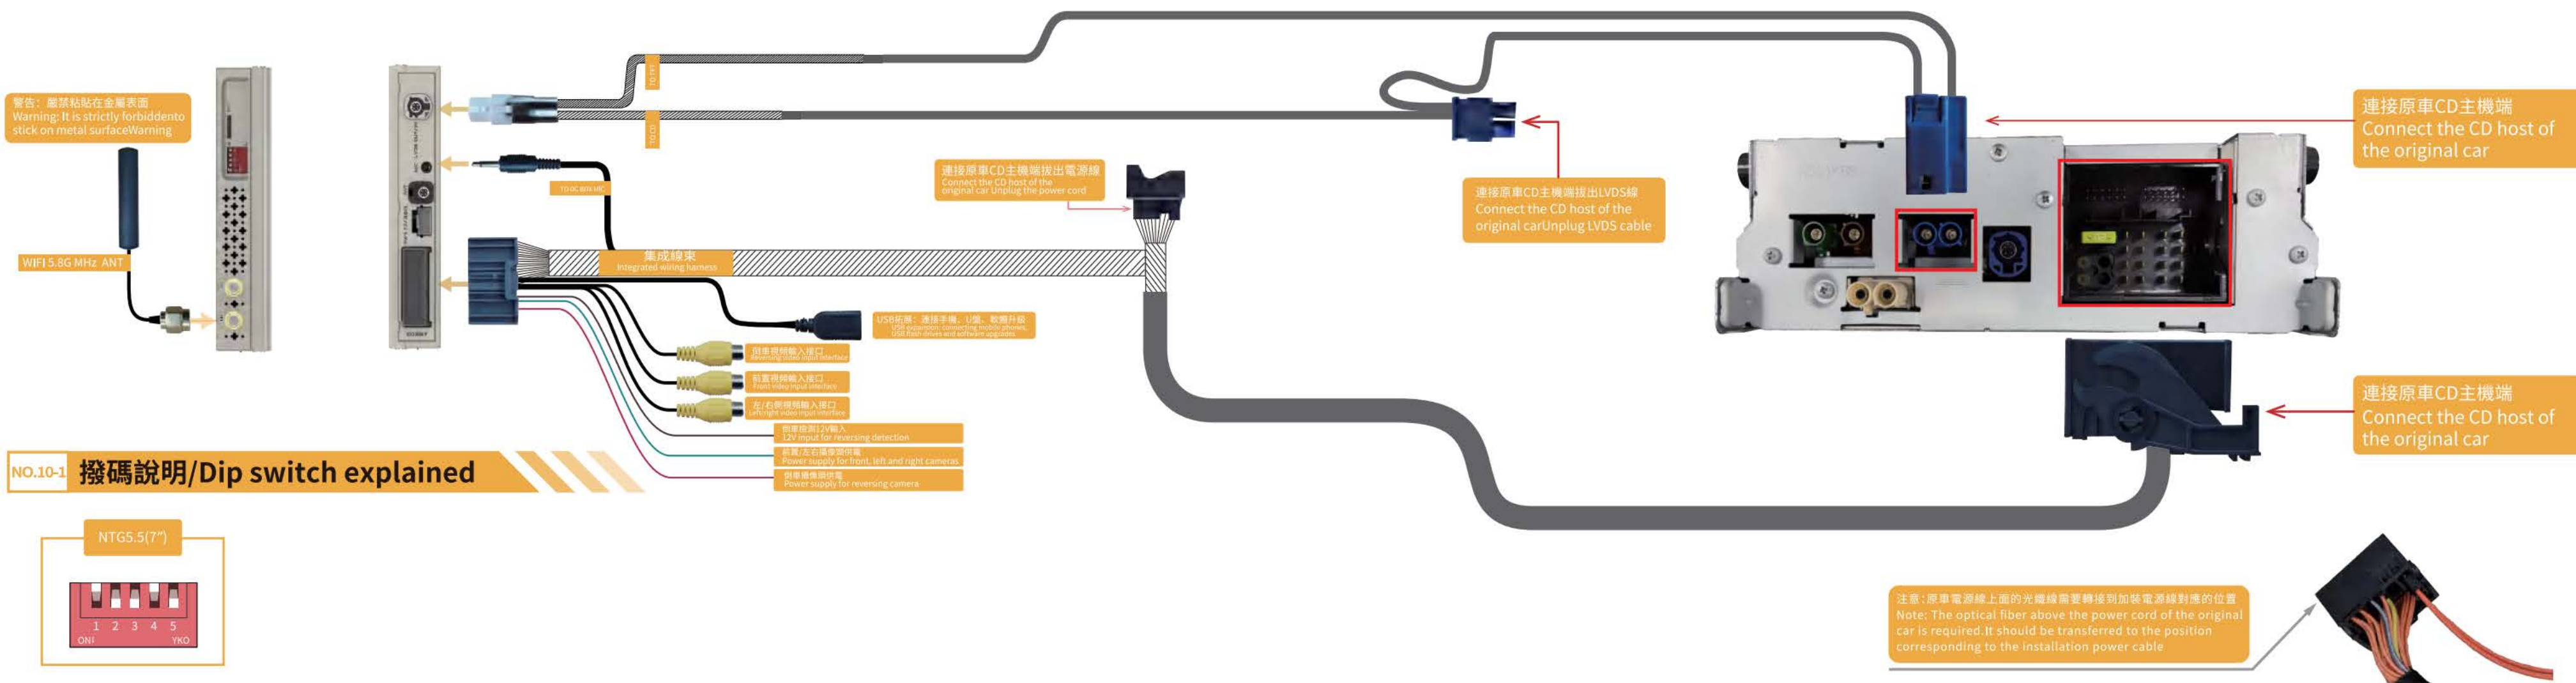

NO.10-1 撥碼說明/Dip switch explained



* 語音喚醒
Voice awakening

* 來電接聽
Call answering

* 結束通話
End call

長按2秒進入系統頁面
Press and hold for 2 seconds to enter the system page




* 長按2秒進入系統頁面
Press and hold for 2 seconds to enter the system page
* 短按回系統主頁面HOME
Short press back to the HOME page of the system

* COMAND旋鈕控制系統APP
COMAND knob control system APP
* 按下進入APP功能
Press to enter the APP function
* 左撥右撥控制媒體上下曲
Left dial and right dial control media up and down
* 上撥下撥控制光標上下移動
Dialing up and down controls the cursor to move up and down


* 鼠标跟触摸操作
Mouse and touch operation

* 切换鼠标跟触摸操作模式
Switch between mouse and touch operation mode

NO.12 NTG5.5大屏連線示意圖 / Schematic diagram of connection

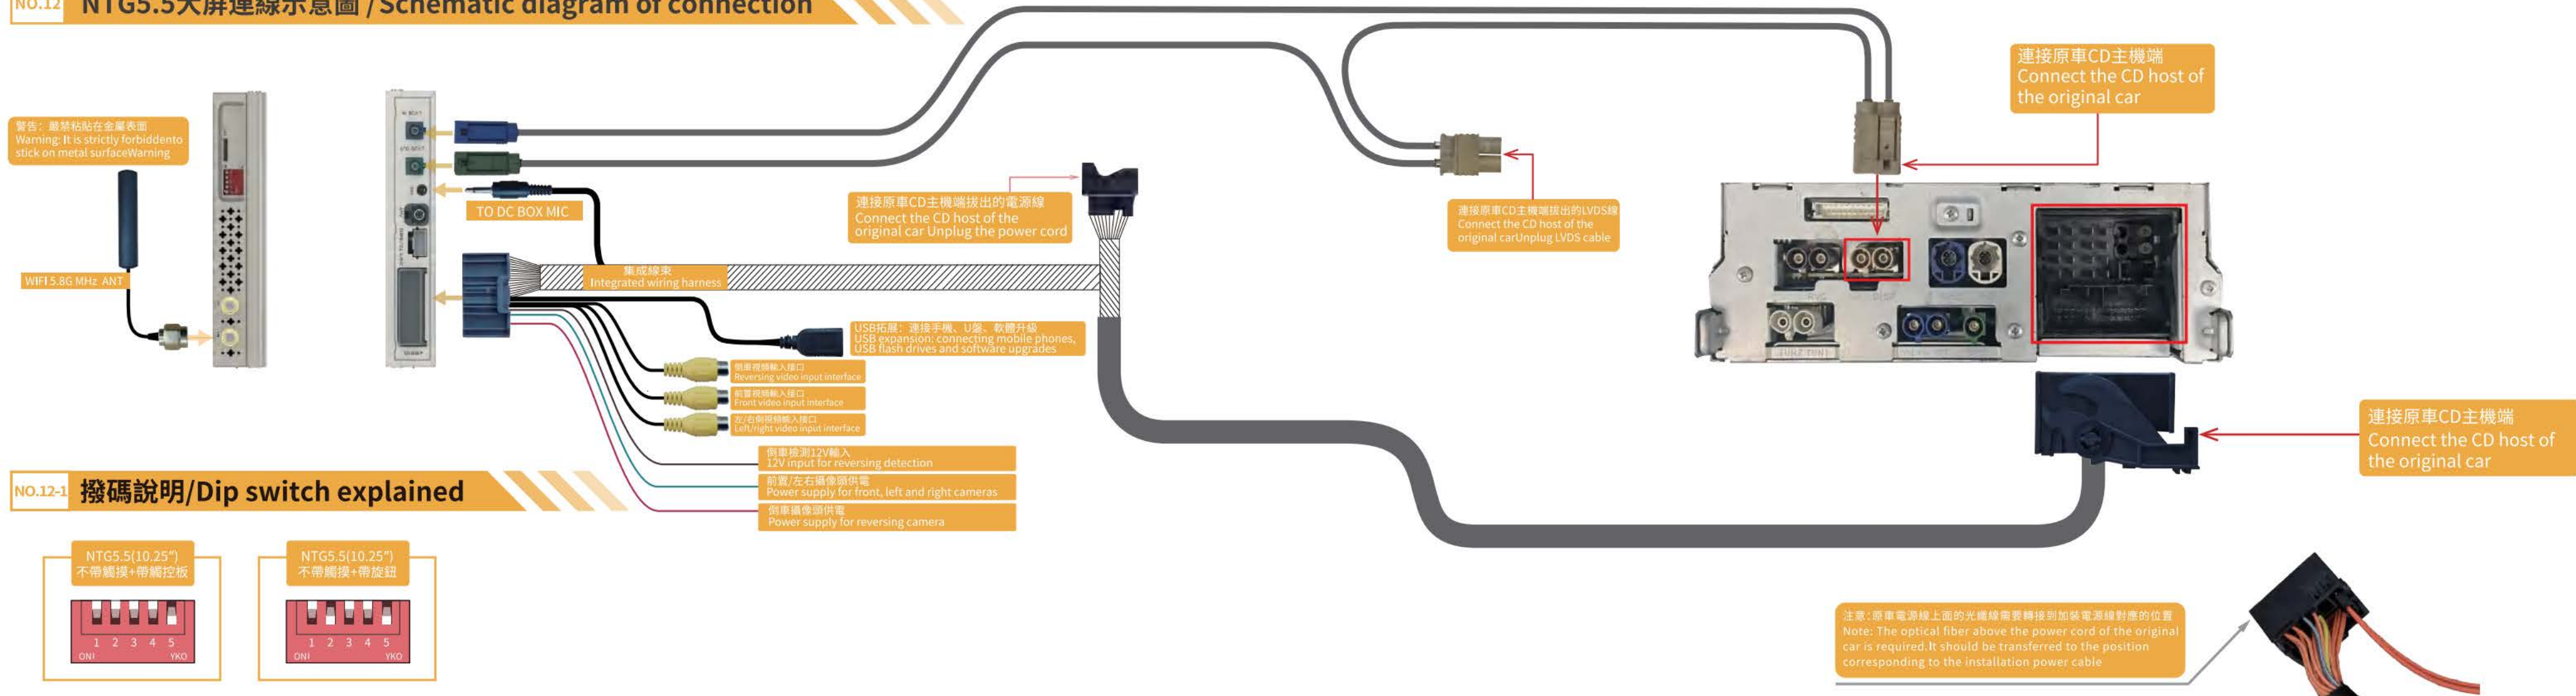

NO.12-1 撥碼說明/Dip switch explained

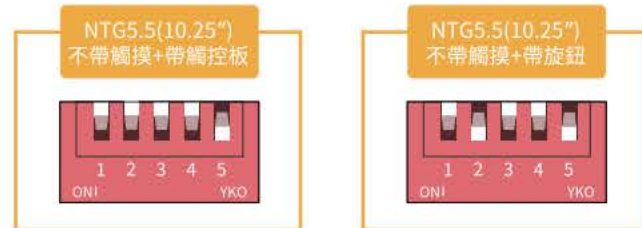

NO.13 NTG5.5大屏按鍵操作說明/Operating instructions for steering wheel buttons




* 語音喚醒
Voice awakening

* 來電接聽
Call answering

* 結束通話
End call

長按2秒進入系統頁面
Press and hold for 2 seconds to enter the system page

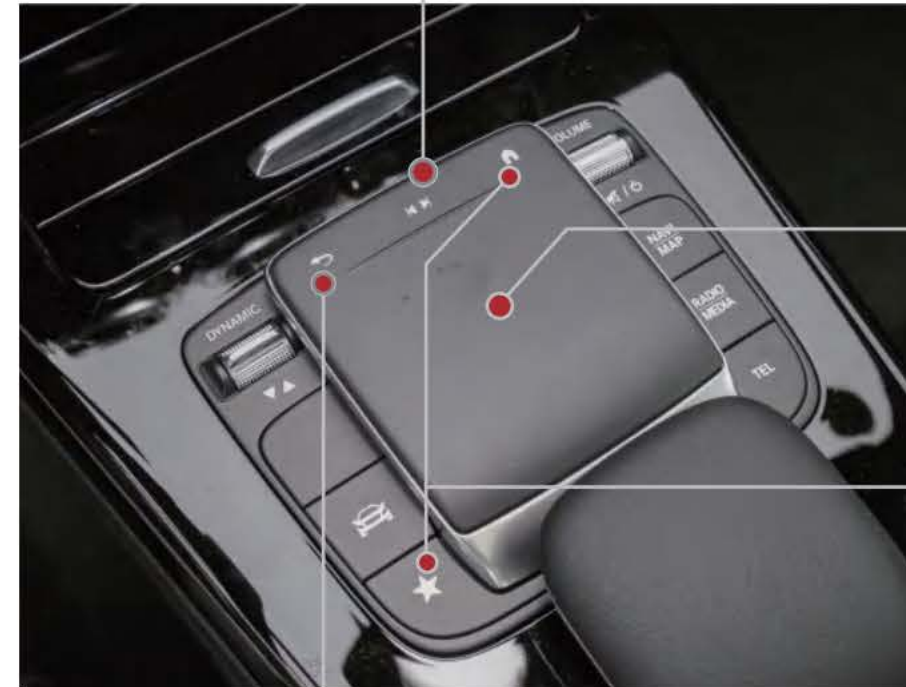

* 控制媒體上下曲
control media up and down

* 鼠标跟触摸操作
Mouse and touch operation

* 長按2秒進入系統頁面
Press and hold for 2 seconds to enter the system page
* 双击切换鼠标和旋钮控制模式
Double click to toggle mouse and knob control mode
* 短按回系統主頁面HOME
Short press back to the HOME page of the system

* 切换鼠标跟触摸屏操作模式
Switch between mouse and touch operation mode