

Model 3Y Intelligent Soft Closing Door Installation Instruction

Product List



①	L	④	R
②	L		
③	R		

1. Tools required for installation

Plastic wrench, #8 sleeve, #10 sleeve, T30 Torx screwdriver, Electric hand drill

2. Installation precautions

-Main screen power needs to be turned off before installation

Tip: In order to install more quickly, please read the instructions carefully.

Inspection Before And After Installation

NOTE

1. Check whether the product list is complete and damaged before installation
2. The installation instructions may be slightly different from the actual operation. If there is any difference, please contact us or according to the actual situation.
3. Warning: Do not remove any parts by yourself. Any improper operation is not covered by the warranty.
4. Before installing the product, please turn off the vehicle power and cut off the battery negative pole of the frunk
5. Please watch the installation video and instructions carefully before installation
6. Please confirm whether the installation and wiring are correct before testing after installation.
7. Check whether the installed product functions normally. If there is any problem, please check whether the plug is plugged tightly
8. Check whether the function of the original vehicle is used normally. If there is any problem, please check whether the plug is plugged in tightly.
9. Please do not install the product if you receive a damaged item. Please take photos immediately and provide them to our after-sales team for confirmation. Photos should be provided that include all parts of the product and can display the damage. (If the product is notified of the damage after installation, claims and reissues will not be accepted, and you will need to purchase the parts again at your own expense.)



installation manual



tutorial video

Aftersale Contact

Phone/whatsapp: +86 130 4421 9654

+1-949 3584 793

Email: support@hansshow.com

Installation Steps - Front Door



1. First, raise the front door glass to the highest position, remove the loudspeaker from the front door, and unplug the loudspeaker




2. Remove the three screws from the front door interior trim panel, and then take off the trim panel; There are many clips inside the interior trim panel. when remove it, need to pry the panel outward and insert it in the direction of the arrow

Installation Steps - Front Door



3. Unplug the harness plug on the interior trim panel and separate the wire harness from the interior trim panel; Remove the emergency door opening pull cable. (Pull out the floor lamp first, and the glass will automatically stop at the position where the fixing screw can be removed.)

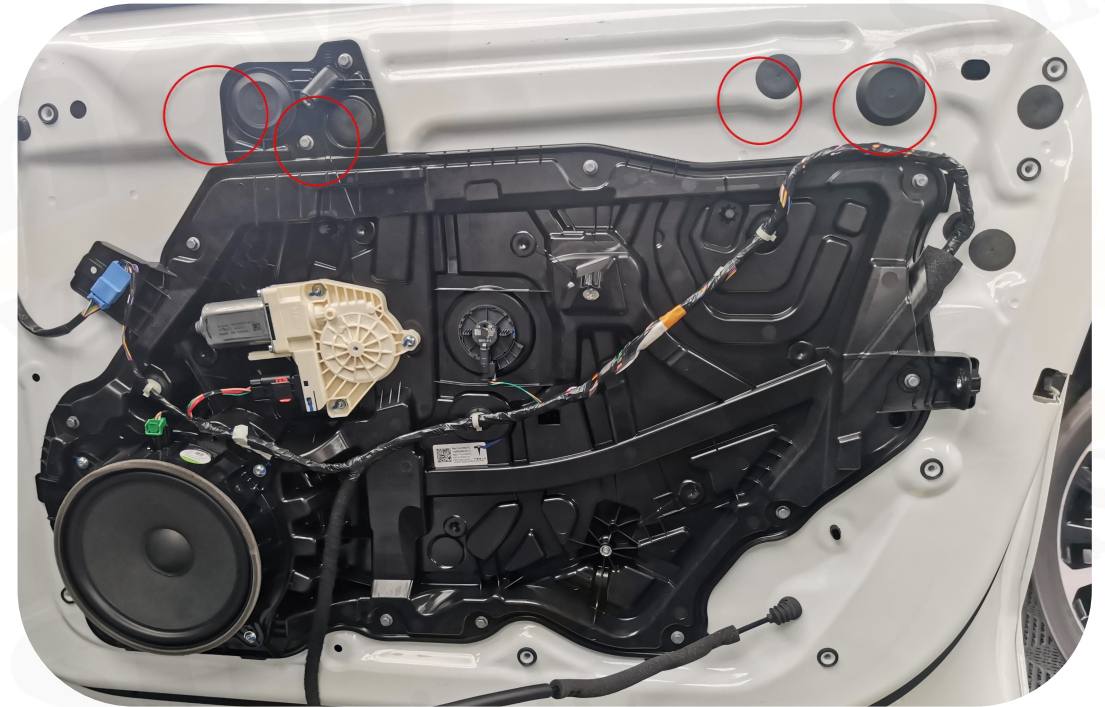

4. Unscrew the No. 8 screws on the inner door panel, Remove the soft rubber cover, and then unscrew the fixing screws to remove the glass; Then remove the inner panel

Installation Steps - Front Door



5. First remove the glass outer shield, Use a straight pry plate to pry open the glass fixed plate, Remove the glass adhesive strip and then remove the glass



6. Unscrew three fixing screws of the original vehicle lock block and remove the original vehicle lock block

Installation Steps - Lock Block





1. Unscrew two screws from the lock block shell and remove the shell



2. Remove the emergency cable from the original vehicle lock block

Installation Steps - Lock Block

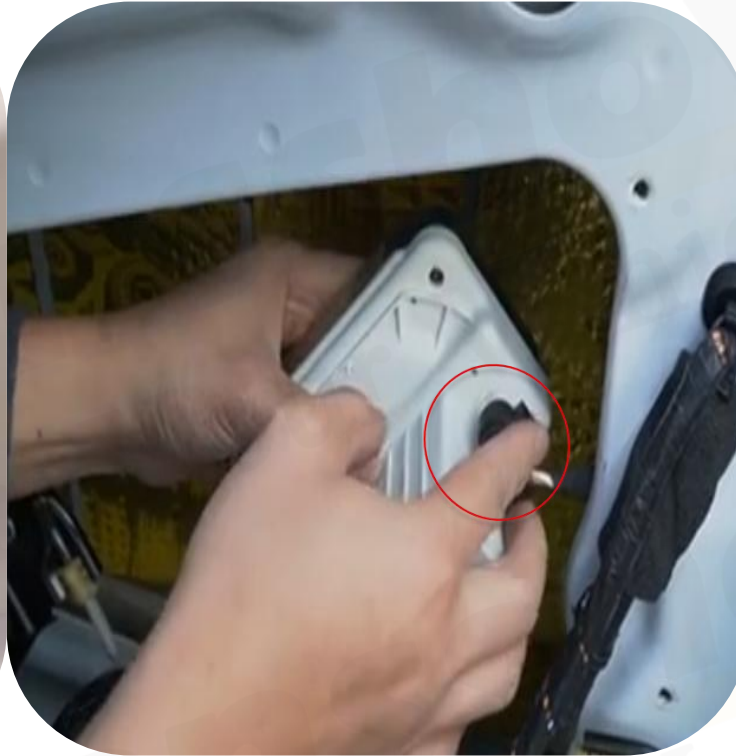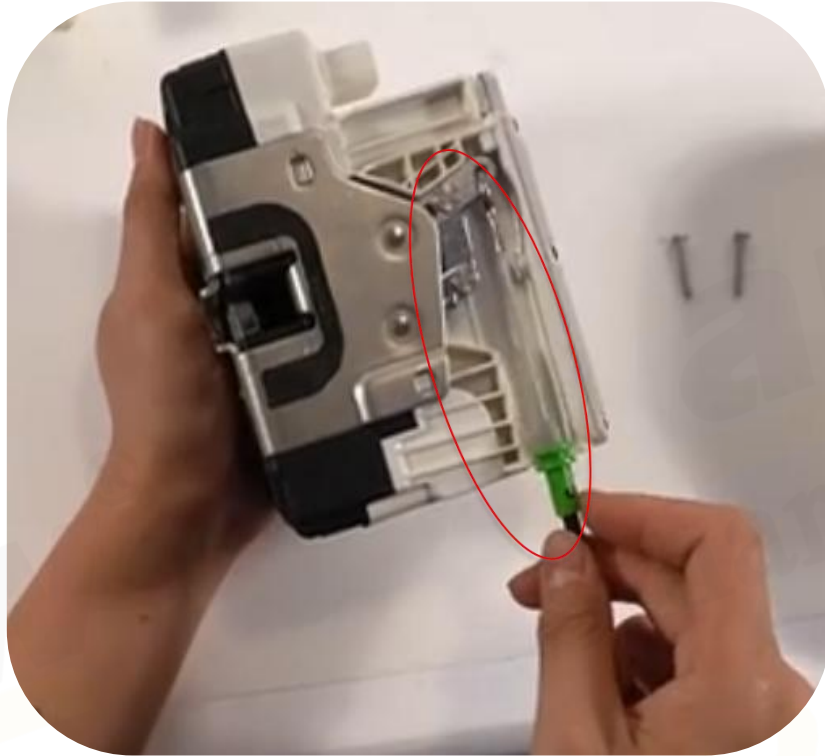


3. Clip the removed emergency cable onto the electric suction lock block

4. Plug in the electric suction lock block plug, and install and screw in three screws after testing that there are no problems

Installation Steps - Rear Door




1. Remove the two screws from the rear door interior trim panel, and then take off the trim panel; There are many clips inside the interior trim panel. when remove it, need to pry the panel outward and insert it in the direction of the arrow

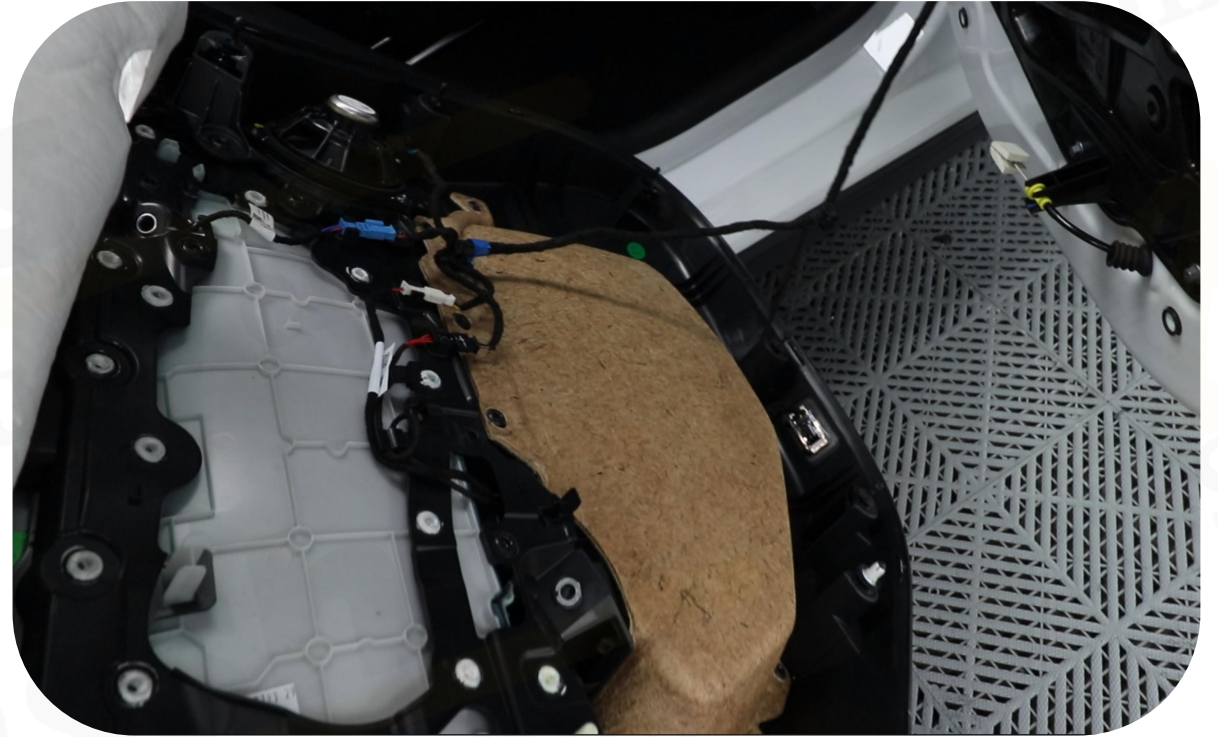

3. Unplug the harness plug on the interior trim panel and separate the wire harness from the interior trim panel

Installation Steps - Rear Door

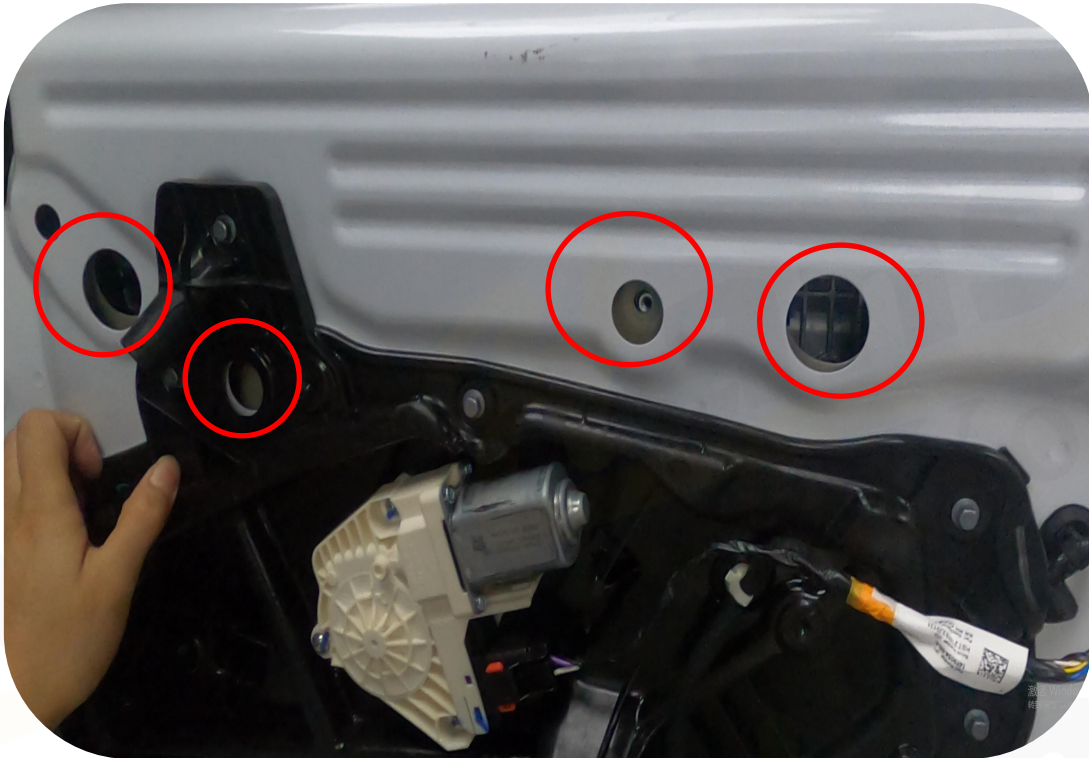

3. Remove the glass fixing screws, take off the glass and adhesive strips, unplug the glass lifter motor, and then remove the inner plate



4. Lift up and remove the glass
(see page 6 for lock block installation)